



HTC Desire HTC Desire Speaker Replacement

This guide is to replace a speaker for the HTC Desire.

Written By: Scott Olson



INTRODUCTION

This will show reader how to disassemble the inside of a HTC Desire. It will teach readers how to replace the internal speaker of the phone.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)



PARTS:

- [HTC Desire Speaker](#) (1)

Step 1 — Battery




- Insert flat end of spudger into slot on the top of phone to pry off the back plate.

Step 2




- Use flat edge of spudger to lift the bottom right corner of the battery.
- Lift the battery out of the phone.

Step 3 — Vibrator

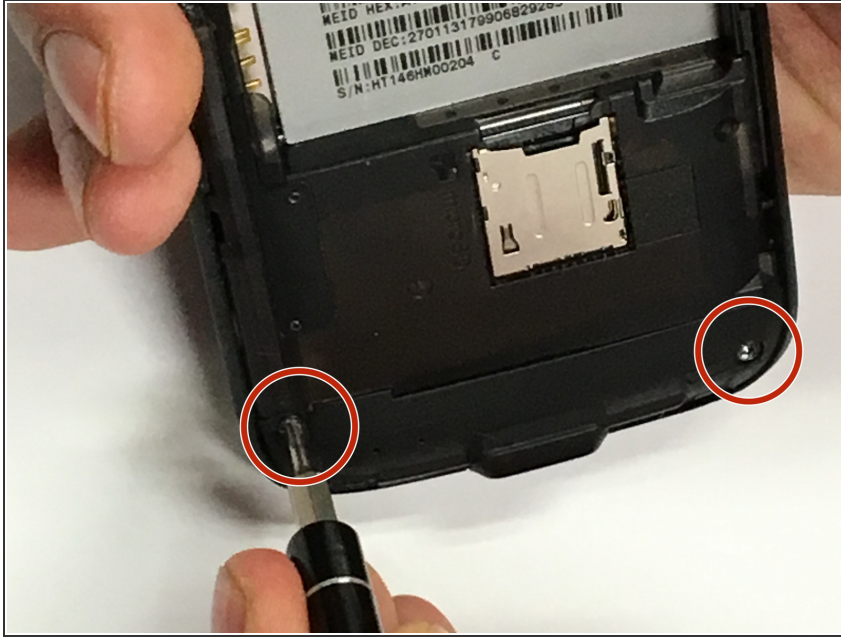


- Remove the lower, two 0.5 mm screws using Torx T5 screwdriver.

Step 4

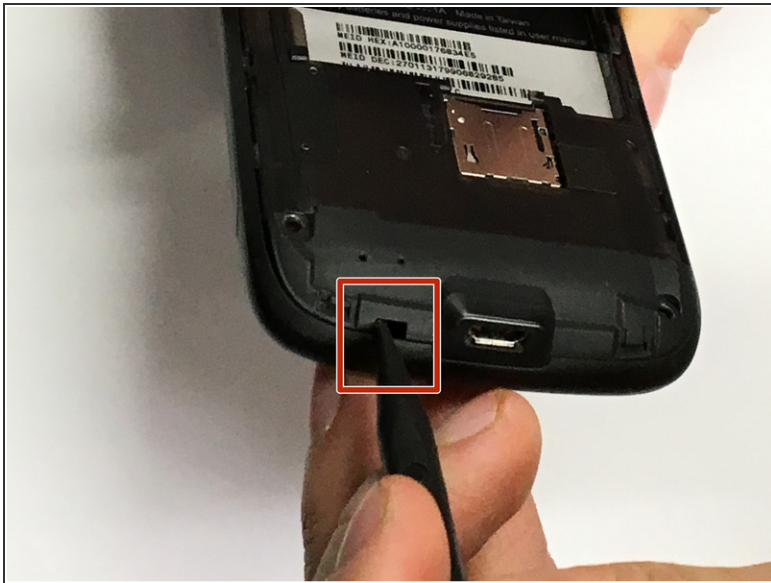

- Use spudger to pry vibrator panel off.

Step 5

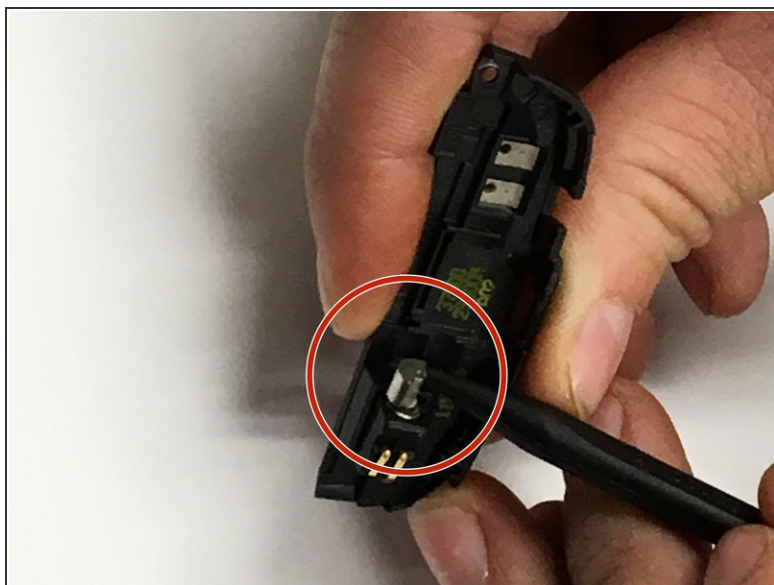


- Use spudger to remove the vibrator.

Step 6 — HTC Desire Speaker




- Take out the upper, two 0.5 mm Torx screws with a Torx T5 bit.

Step 7

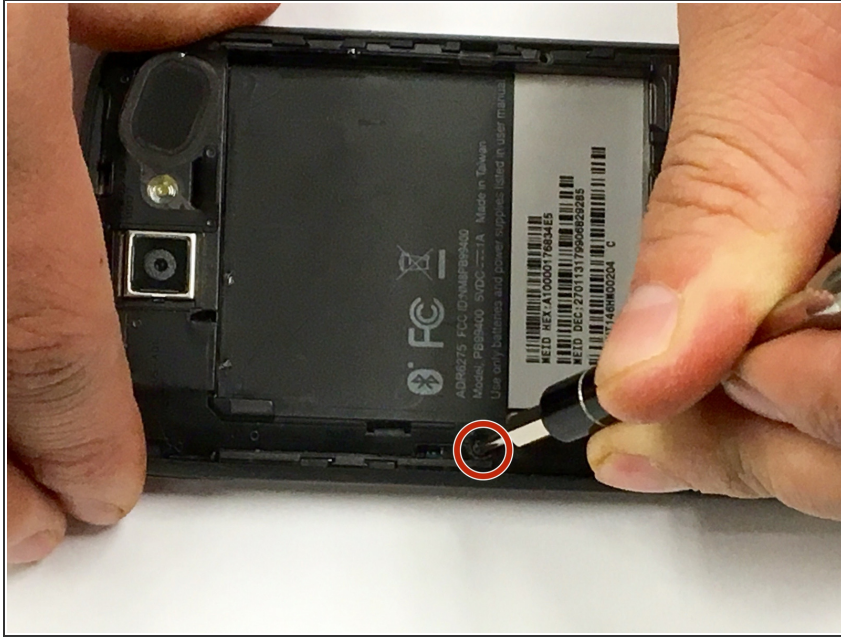


- Take the middle 0.3 mm phillips screw out with the phillips J000 tip.

Step 8

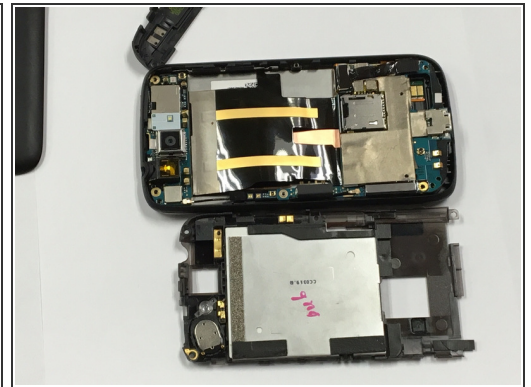


- Using the spudger, pry up to remove the battery holder.

Step 9

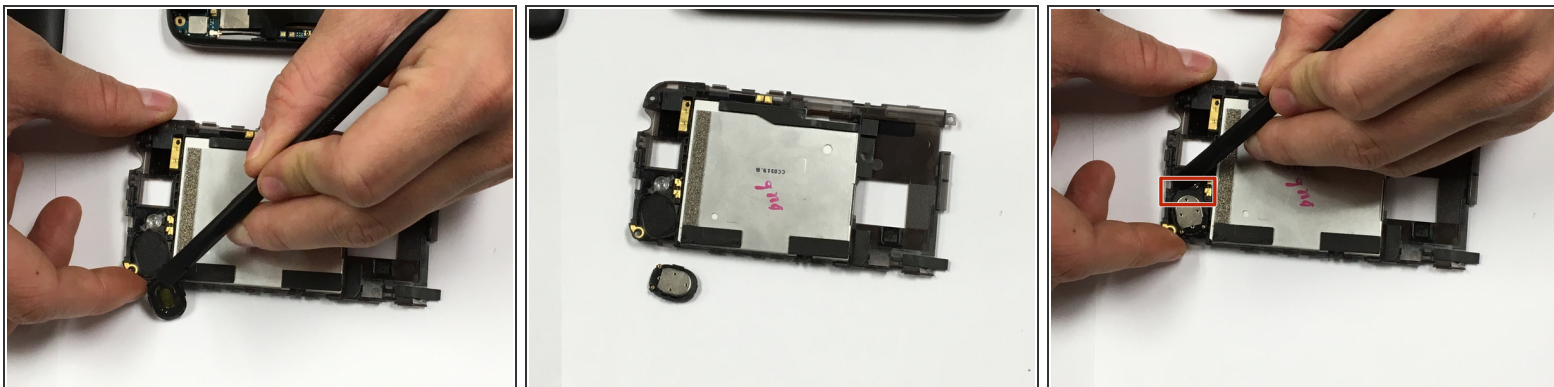

- Using the spudger, pry the speaker out of its place.

Step 10

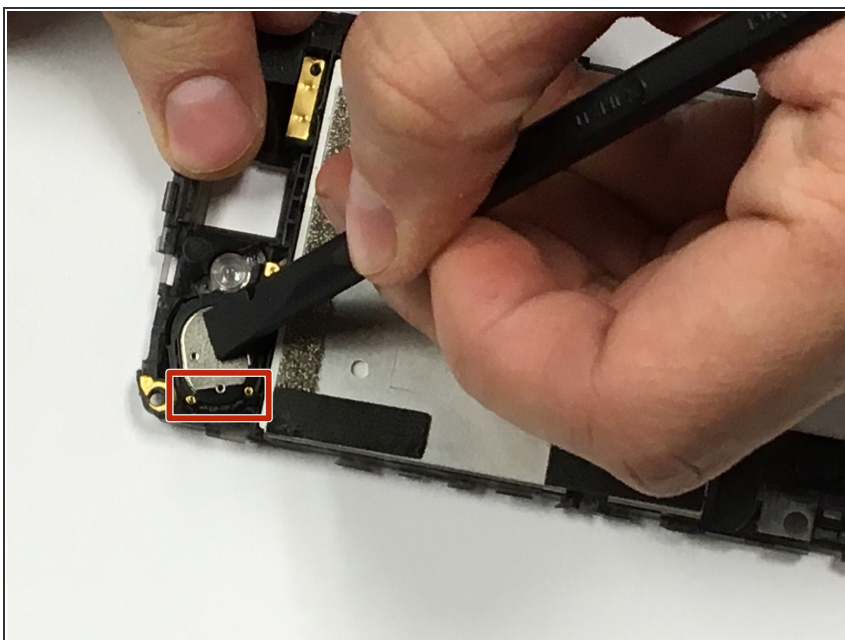

- With the springs up, place the new speaker into position.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 06:42:29 AM.